


TOPDON

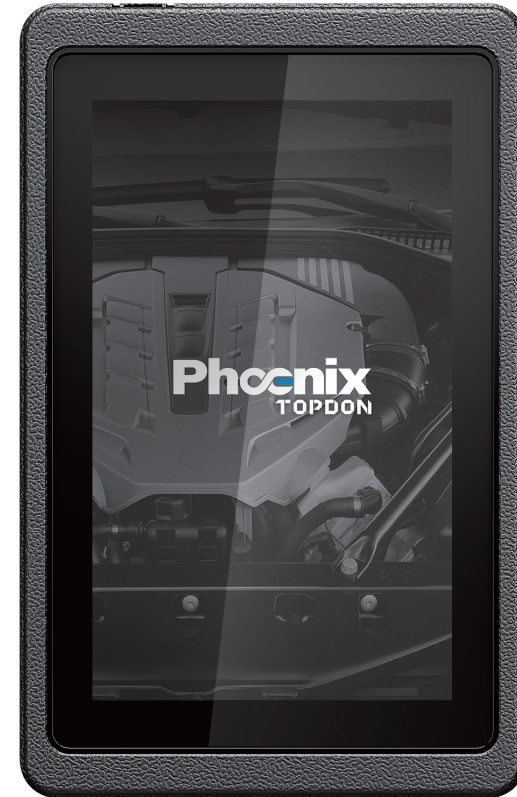

If you have any questions or doubts, please contact us via

Hotline (+86)0755-23576169
Email support@topdon.com
Website www.topdon.com
Facebook @TopdonOfficial
Twitter @TopdonOfficial

MADE IN CHINA

TOPDON



Phoenix / Phoenix Lite

Smart Automotive Diagnostic System

USER MANUAL

Content

Welcome	3
About	3
Notice	3
Compatibility	3
Features	4
1. Phoenix / Phoenix Lite Tablet	4
2. VCI (for 12V cars only)	6
Operation Introduction	7
1. Network Setting	7
2. Registration	7
3. Upgrade	11
4. Interface	12
4.1 Main Menu	12
4.2 Toolbar	15
5. Preparation	16
5.1 Testing Conditions	16
5.2 Connection	16
5.3 Bluetooth Setting	17
6. Methods of Diagnostics	18
6.1 Intelligent Diagnostics	18
6.2 Local Diagnostics	22
6.3 Remote Diagnostics	25
7. Diagnose	30
7.1 Quick Test (Health Report)	30
7.2 System Scan	32
7.3 System Selection	33
7.4 Actuation Test	38
7.5 My Reports	40
7.6 Diagnostic History	41
7.7 Feedback	42
8. Reset Procedures	43
8.1 Oil Reset Service	44
8.2 Electronic Parking Brake Reset	44

8.3 Steering Angle Calibration.....	45
8.4 ABS Bleeding	45
8.5 Tire Pressure Monitor System Reset	45
8.6 Gear Learning	45
8.7 IMMO Service.....	45
8.8 Injector Coding	46
8.9 Battery Maintenance System Reset.....	46
8.10 Diesel Particulate Filter (DPF) Regeneration	46
8.11 Electronic Throttle Position Reset	46
9. Software Upgrade.....	47
9.1 Update Diagnostic Software & APP	47
9.2 Set Frequently Used Software.....	48
10. Remote Assist (TeamViewer Quick Support).....	40
11. More.....	51
11.1 Maintenance Help.....	51
11.2 VCI.....	51
11.3 Activate VCI	51
11.4 Firmware Fix	51
11.5 Profile.....	52
11.6 Change password.....	52
11.7 Settings.....	52
Technical Specification.....	55
Warranty	56
Warnings.....	57
Cautions	58
FAQ	60

Welcome

Thank you for purchasing TOPDON Complete Diagnostic System Phoenix / Phoenix Lite. Please patiently read and understand this User Manual before operating this product.

About

TOPDON Phoenix / Phoenix Lite serves as the newest addition to the TOPDON's line of highly advanced smart diagnostic tools. This wireless (Bluetooth) Android-based diagnostic tablet inherits TOPDON's advanced diagnosing technology, and is optimized by covering an array of sophisticated and powerful diagnostic features, and a wide range of vehicles etc., to provide precise and effective test results for professionals.

Notice

This Product Manual is subject to change without written notice. Read the instruction carefully and use the unit properly before operating. Failure to do so may cause damage and/or personal injury, which will void the product warranty.

Compatibility

TOPDON Phoenix / Phoenix Lite is compatible with following protocols:

- ISO 9142-2
- ISO 14230-2
- ISO 15765-4
- K/L-Line
- Flashing Code
- SAE-J1850 VPW
- SAE-J1850 PWM
- CAN ISO 11898
- Highspeed
- Middlespeed
- Lowspeed and Singlewire CAN
- GM UART
- UART Echo Byte Protocol
- Honda Diag-H Protocol
- TP 2.0
- TP 1.6
- SAE J1939
- SAE J1708
- Fault-Tolerant CAN

Features


The Phoenix / Phoenix Lite system includes two main components:

- Phoenix / Phoenix Lite tablet - the central processor and monitor for the system.



- VCI - the device for accessing vehicle data via Bluetooth communication.


1. Phoenix / Phoenix Lite Tablet

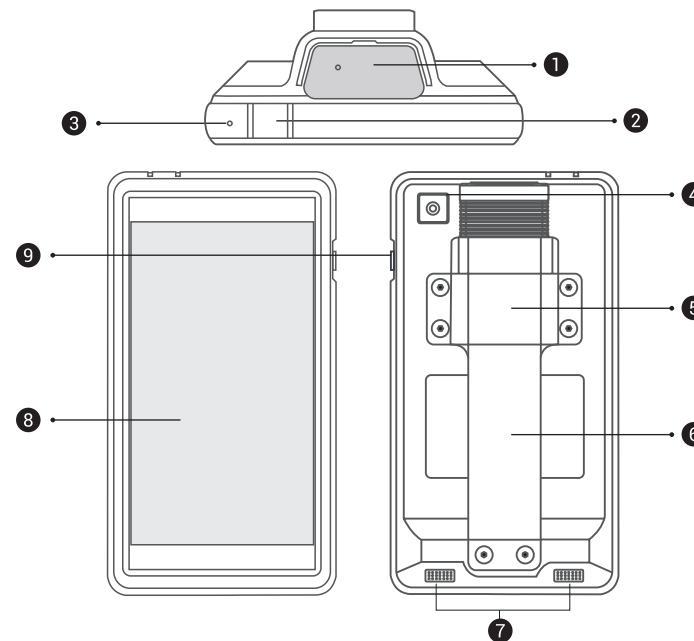

No.	Name	Descriptions
1	VCI	Access vehicle data.
2	Charging/Data I/O port	<ul style="list-style-type: none"> Connect to the power adaptor for charging. Connect to the PC for data exchange.
3	Microphone	Convert voice into an electrical signal.
4	Rear Camera	Snapshot the view behind the screen.
5	Slot for VCI	For housing the VCI device.
6	Carry Strap	For easily holding the tablet.
7	Speakers	Convert an electrical audio signal into a corresponding sound.

No.	Name	Descriptions
8	7-inch Touchscreen	Show test results.
9	Power/Screen Lock Key	In Off mode, hold it for 2 seconds to turn the tablet on. In On mode: <ul style="list-style-type: none"> • Hold it for 2 seconds to turn the tablet off. • Hold it for 8 seconds to perform a forced shutdown. • Press it to activate the LCD if the LCD is off. • Press it to turn off the LCD if the LCD is on.

2. VCI (for 12V cars only)

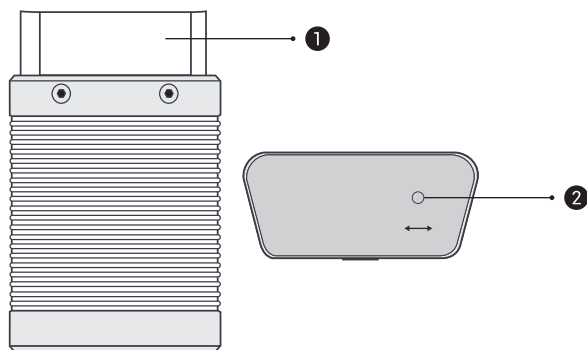

No.	Name	Descriptions
1	OBD-16 Diagnostic Connector	Connect to the vehicle's OBDII DLC port.
2	Charging/Data I/O port	<ul style="list-style-type: none"> • BLUE: The VCI is connected to the Phoenix / Phoenix Lite via Bluetooth. • RED: The VCI is plugged into the vehicle's DLC port.

Operation Introduction

1. Network Setting

TOPDON Phoenix / Phoenix Lite adopts a built-in Wi-Fi module for wireless networks.


On the android system home screen, tap [Settings] -> [Wi-Fi].
Select the desired Wi-Fi connection until "connected".

***Note: The tablet will automatically connect to the available previously linked network.**

2. Registration


For initial use, the registration is the necessary first procedure to activate the Phoenix / Phoenix Lite.

Tap **[Login]** on the upper right corner of the screen:

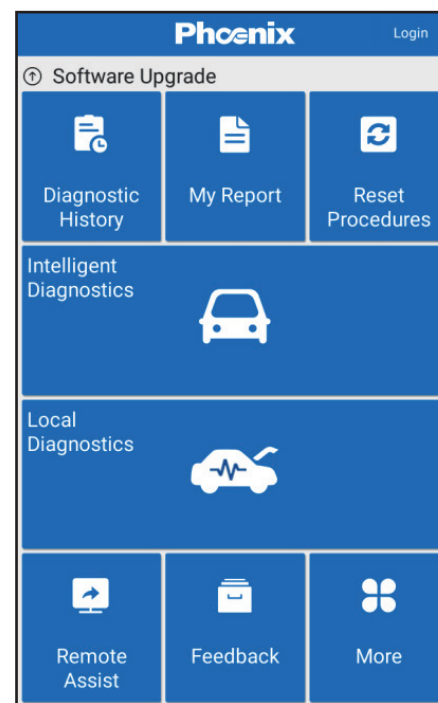


Tap **[New Registration]**:




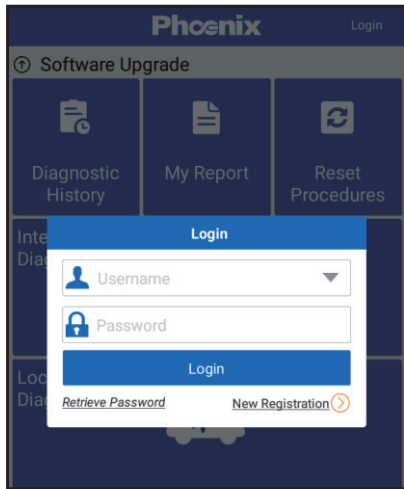


Input the information needed, and tap [Register]:

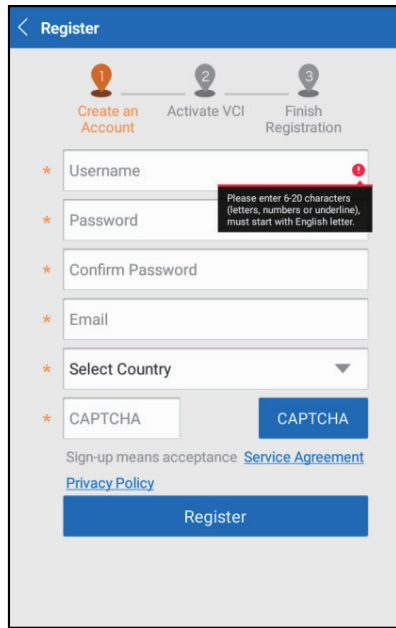


The following screen will appear:

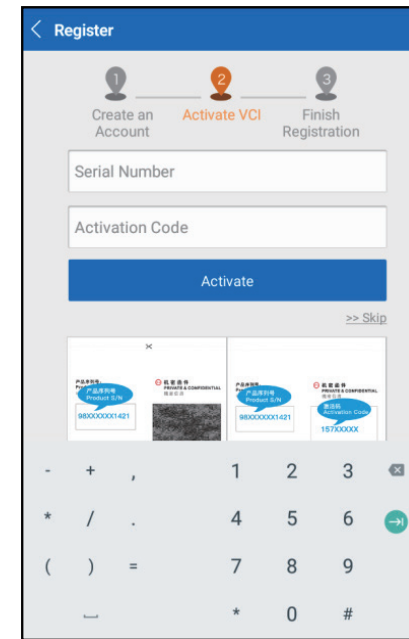

*Note: The Serial Number and Activation Code can be found in the password envelope.

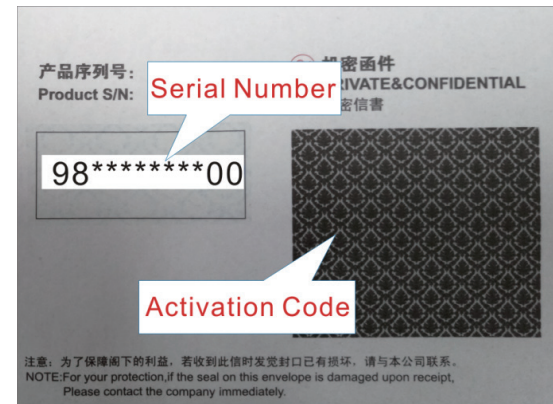

Input the Serial Number and Activation Code, and Tap **[Activate]** to finish your registration.

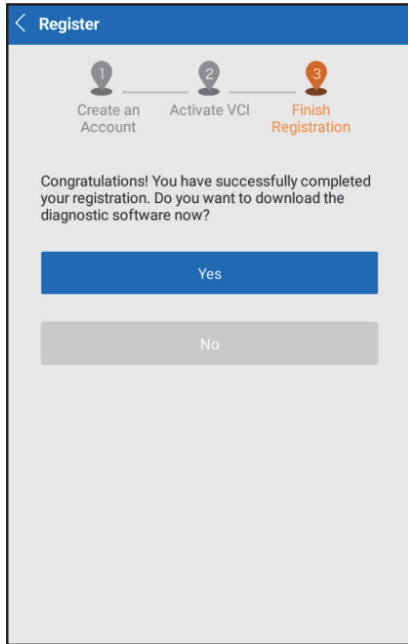

To download the diagnostic software, tap [Yes] to enter the download page. Tap [No] to ignore.

***Note:**

- The Phoenix / Phoenix Lite will automatically store the username and password which are correctly entered before. You will not need to input the account information manually next time.
- If you forgot the password, tap **[Retrieve password]** and then follow on-screen instructions to set a new password.

3. Upgrade

All software is updated periodically. It is recommended to check regularly for updates and install the latest software version for the best service, functions, and experience. Tap **[Software Upgrade]** in the main menu, the following screen will appear:




***Note:** Make sure the Wi-Fi is strong and stable while upgrading.




4. Interface

4.1 Main Menu

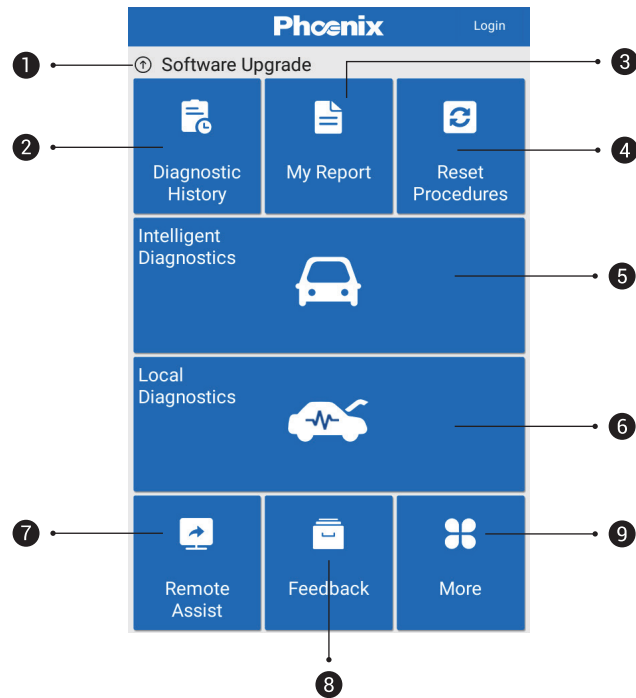


No.	Name	Descriptions
1	Software Upgrade	<ul style="list-style-type: none"> Update vehicle diagnostic software and APK. If new software is detected, a numeric indicator will appear on the logo.
2	Diagnostic History	<ul style="list-style-type: none"> Access the diagnostic reports from the previously tested vehicles. Resume the previous operation without starting from scratch.
3	My Report	View, delete, or share saved diagnostic reports or records.
4	Reset Procedures	Perform commonly used repair & maintenance services.

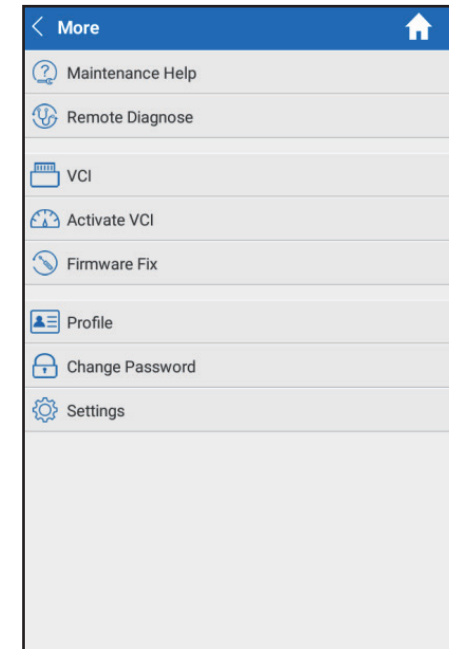


No.	Name	Descriptions
5	Intelligent Diagnostics	<ul style="list-style-type: none"> Obtain vehicle data from the cloud server to perform a quick test via reading VIN, to avoid various defects resulting from the step-by-step menu selection. Check the historical repair records online.
6	Local Diagnostics	Diagnose a vehicle manually.
7	Remote Assist	Receive remote support from others by allowing them to control your tablet via TeamViewer software.
8	Feedback	Feedback the recent 20 diagnostic logs for issue analysis.
9	More	Configure system settings and manage personal information.



No.	Name	Descriptions
1	Maintenance Help	Include Product Manual, FAQ and Quick Start Guide.
2	Remote Diagnostics	Help repair shops or technicians launch instant messaging and remote diagnosis, making the repair job getting fixed faster.
3	VCI	Manage all your activated VCI connectors.
4	Activate VCI	Activate a new VCI connector.
5	Firmware Fix	Upgrade and fix diagnostic firmware.
6	Profile	View and configure personal information.
7	Change password	Modify your login password.
8	Settings	Make some application settings and view software version information etc.

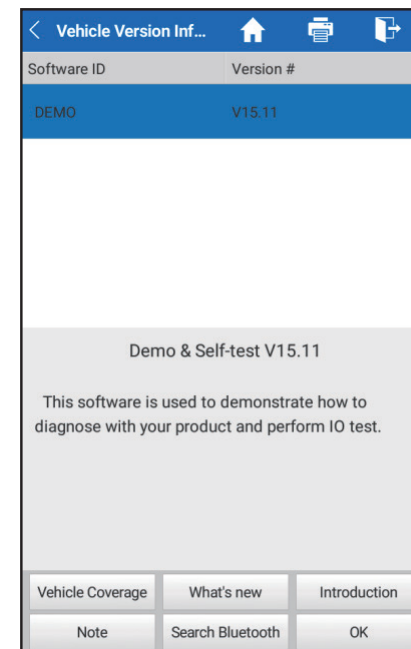4.2 Toolbar



No.	Name	Descriptions
1		Return to the main menu screen.
2		Print the current screen. *Note: The separate Wi-Fi Printer is needed.
3		Exit the diagnostic application.


5. Preparation

5.1 Testing Conditions

- The ignition is turned on.
- The vehicle battery voltage is 9~18 volts.
- The throttle is in the closed position.

5.2 Connection

- Locate the vehicle's DLC port. Check the image below for reference.

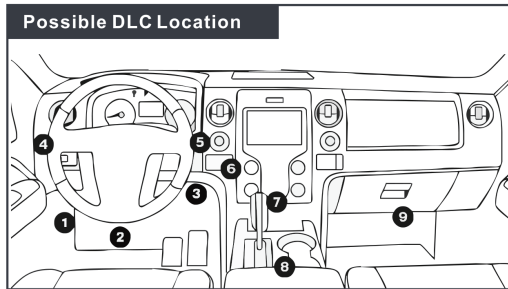

- Plug the VCI into the vehicle's DLC port. The OBDII extension cable is recommended to use.


***Note: For non-OBDII vehicle, proceed as follows:**

1. Connect the VCI to the non-16pin connector via OBD I adaptor.


2. Insert the non-16pin connector into the DLC.

3. To supply power to the OBD I adaptor via:

- **Battery Clamps Cable (optional):**
Connect one end of the battery clamps cable to vehicle's battery, and the other end to the power jack of the OBD I adaptor.

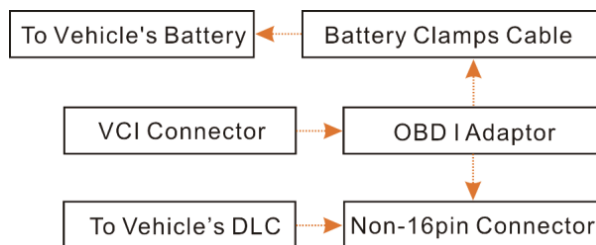


- **Cigarette Lighter Cable (optional):**
Connect one end of the cigarette lighter cable to the vehicle's cigarette lighter receptacle, and the other end to the power jack of the OBD I adaptor.

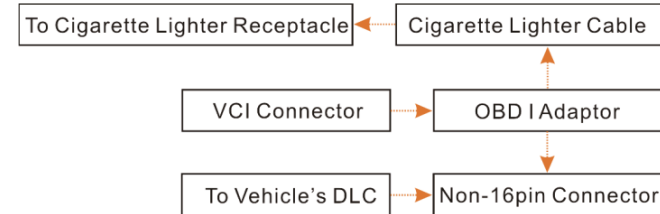

5.3 Bluetooth Setting

Tap [Settings] -> [Bluetooth], and match the desired VCI.

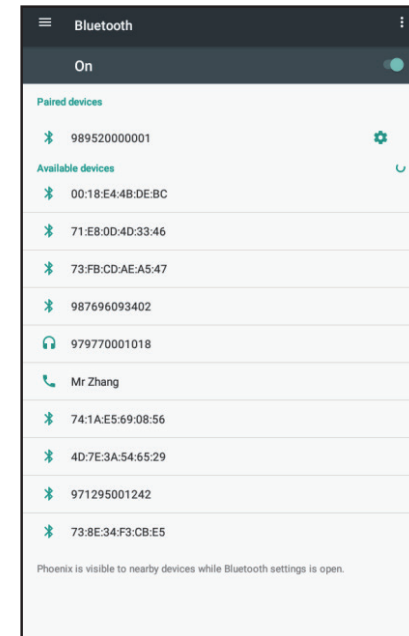

***Note:**

1. By default, the Bluetooth name of the VCI is 98*****00 (***** stands for 8 digits).
2. If the Bluetooth pair request pops up on the screen, enter the request pin code (default code: 0000 or 1234).

Once the Bluetooth pairing is successful, the VCI will be shown under the paired tablet tab.


6. Methods of Diagnostics

Three methods are available:

- **Intelligent Diagnostics:**
The system will automatically guide you directly to the fix and help you eliminate guesswork, without step-by-step manual menu selection.
- **Local Diagnostics:**
You need to manually select the menu-driven command.
- **Remote Diagnostics:**
This helps repair shops or mechanics to diagnose a remote vehicle, and launch instant messages, allowing for improved efficiency and faster repairs.


6.1 Intelligent Diagnostics

Tap **[Intelligent Diagnostics]** in the main menu. The following screen will appear:

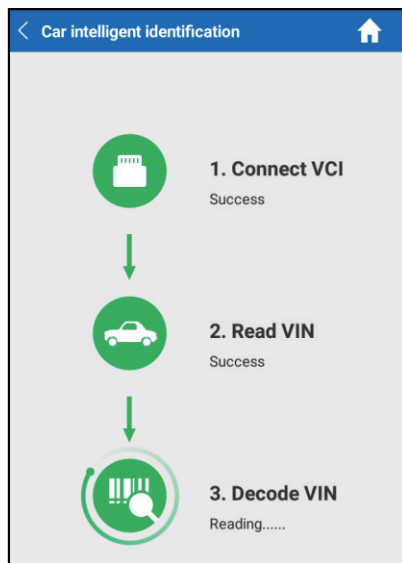


Once the Bluetooth pairing is complete, the tablet starts reading the vehicle VIN.

- If the VIN can be found from the remote server database, the following screen will appear:

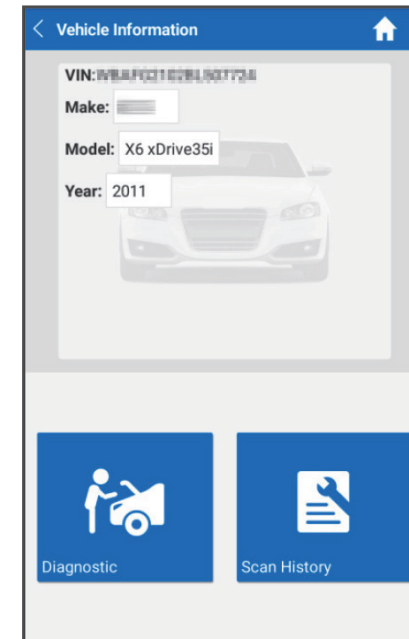


Tap **[Diagnostic]** to start a new diagnostic session.
Tap **[Scan History]** to view the historical repair records, which will be listed in sequence of date if they are available:

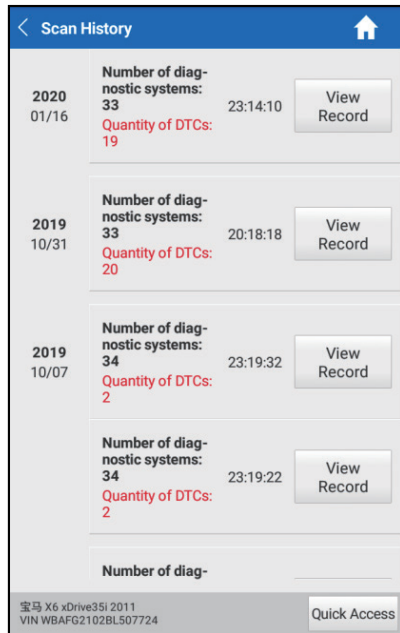


Tap **[View Record]** to view the details of the current diagnostic report.
Tap **[Quick Access]** to directly go to the function selection menu.


- If the tablet is failed to access the VIN information, the following screen will appear:

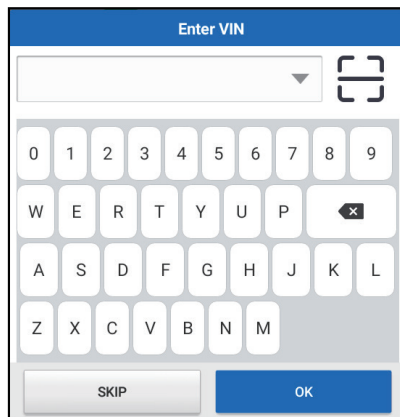



Manually input the correct VIN code, and tap **[OK]** to start the diagnostic session.


Tap **[SKIP]** to quit the Intelligent Diagnostics.

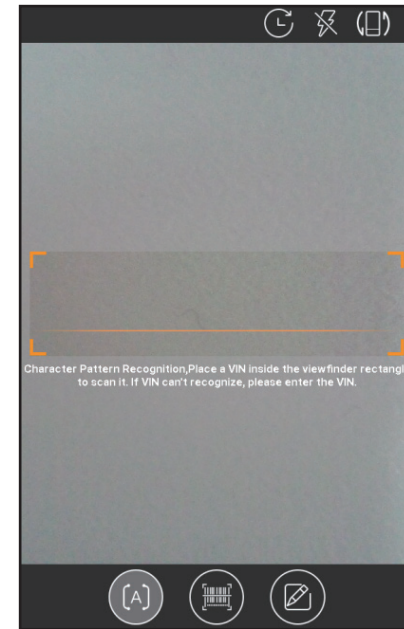Tap , the following screen will appear:




Tap  to input the VIN manually if the tablet has failed to identify the VIN of the vehicle.

Tap  to scan the VIN barcode. If the VIN barcode cannot be recognized, please manually input the VIN.

Tap  to scan the VIN character. If the VIN character cannot be recognized, please manually input the VIN.

After scanning, the following screen will appear:




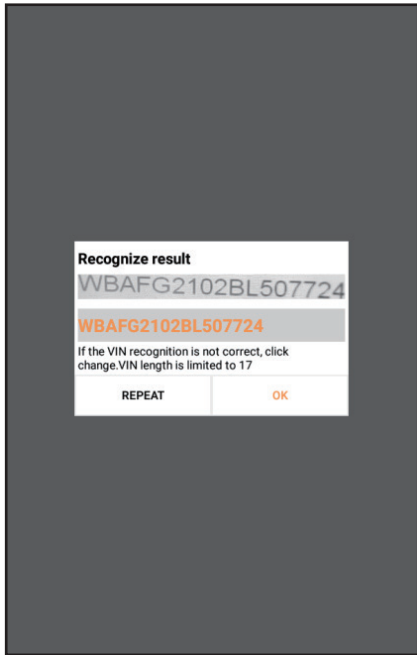


The VIN code in yellow can be modified if it isn't correct.

6.2 Local Diagnostics

Tap **[Local Diagnostics]** in the main menu. The following screen will appear:

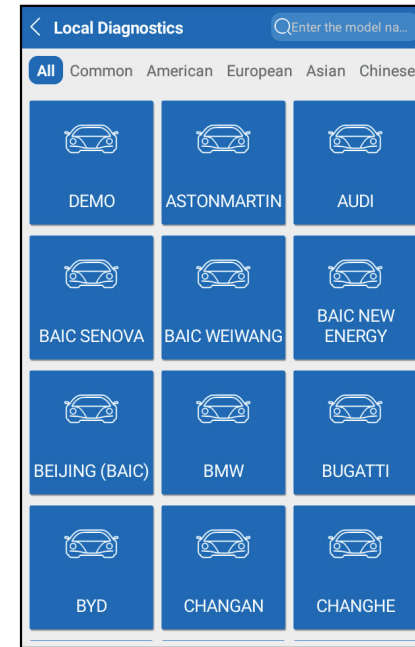

Tap a corresponding diagnostic software logo, the following screen will appear (take **[Demo]** as an example to demonstrate):

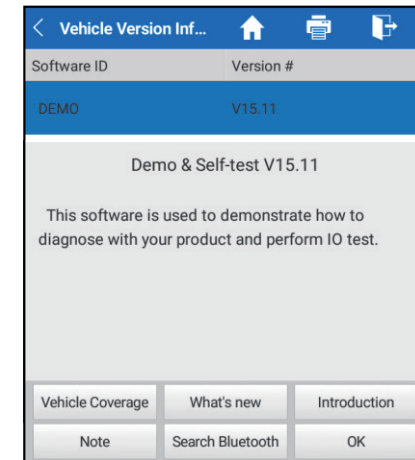


*Explanation of terms:

- Vehicle Coverage - To view the vehicle models that covers currently.
- What's new - To view the optimized items and enhancements.
- Introduction - To check the software function list.
- Note - To read some precautions while operating.
- Search Bluetooth - To search for the available VCIs.

Select the diagnostic software version to proceed.

The tablet will automatically directly navigate to the function selection menu:

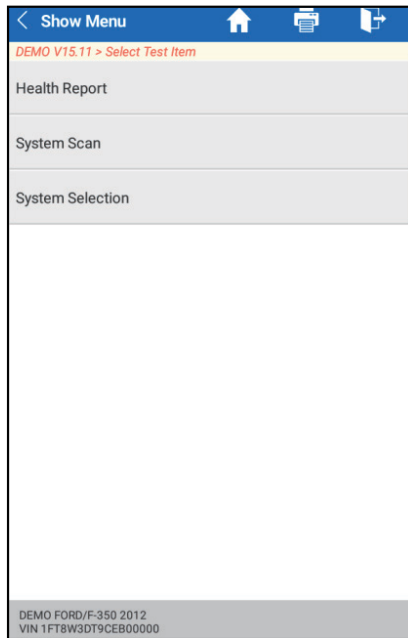


6.3 Remote Diagnostics

This option aims to help repair shops or technicians launch instant messaging and remote diagnosis, for more efficient repair work.

6.3.1 Launch Remote Diagnostics (Device-To-Device)


Tap **[More]**, and tap **[Remote Diagnostics]**, the following screen will appear:

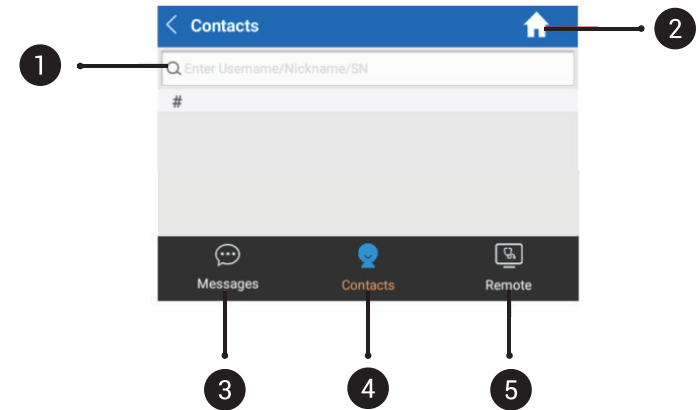

No.	Name	Descriptions
1	Search Bar	Input the username of the Phoenix / Phoenix Lite for searching, and then tap the desired one to add it into friend list.
2	Home Button	Navigate to the main menu.
3	Message Tab	A red dot will appear indicating a received message.
4	Contact Tab	Enter the friend list.
5	Remote Switch	Your technician can control your Phoenix / Phoenix Lite remotely once the switch is ON.

After adding friends, tap **+** for more function options, the following screen will appear:




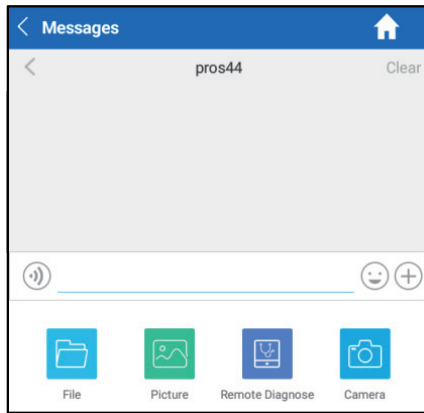


*Explanation of terms:

- File - Choose diagnostic reports or local files to send.
- Picture - Choose screenshots or pictures to send.
- Remote Diagnostic - To start a remote diagnostic session.
- Camera - Open camera to take pictures.

Tap **[Remote Diagnostics]**, the following screen will appear:

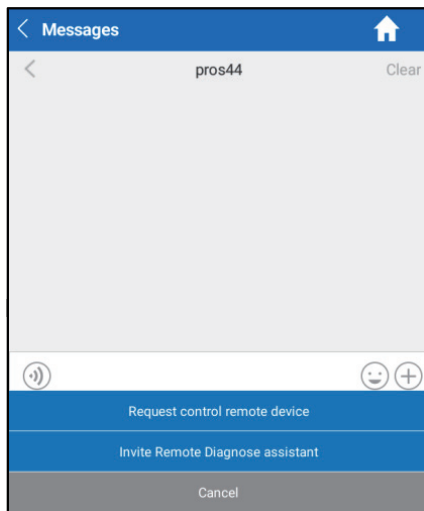



Tap **[Request Control Remote Device]** to run the Remote Diagnostics:

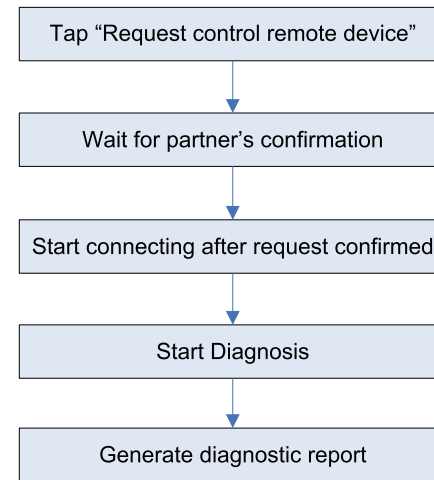

***Note: Once the vehicle remote diagnosis is complete, a report will be automatically created.**

Tap **[Invite Remote Diagnostic Assistant]** to invite a technician to perform remote control on your Phoenix / Phoenix Lite.

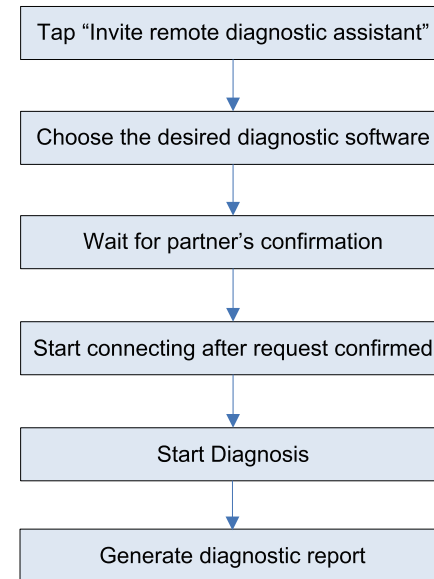


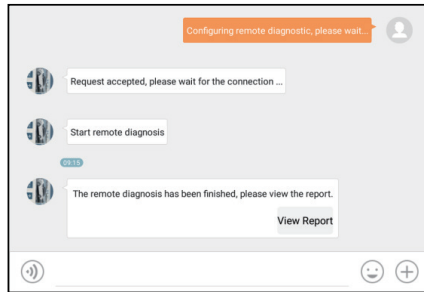


***Note: Once you received the report from the partner, tap [View Report] to view details. All diagnostic reports are saved under the "Remote Diagnostic Reports" of "My Reports" in "Personal Center".**

6.3.2 Launch Remote Diagnostics (Device-To-PC)


Users also can ask for remote control from a PC client technician.

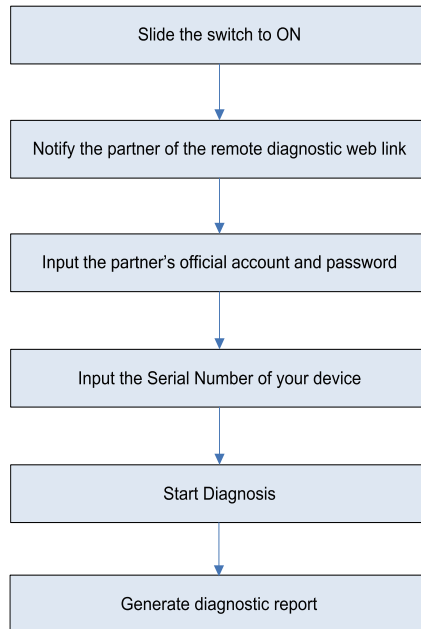

Tap **[Remote]**, the following screen will appear:

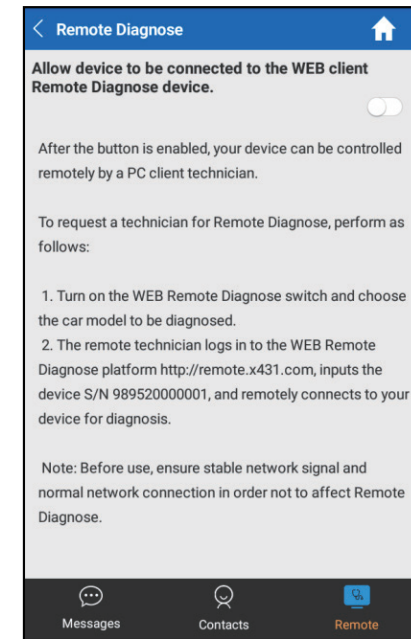

Your technician needs to log in the PC client website <http://remote.x431.com/cn/> to log in:

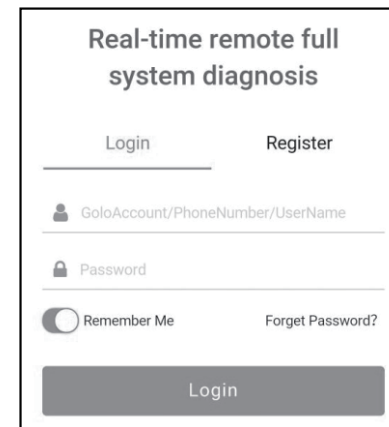

Tell your technician the Serial Number, and start the remote diagnostics.

***Note:**

- Better not operate your tablet while being remotely diagnosed.
- A remote diagnostic report will be automatically generated once it is complete.

7. Diagnose

7.1 Quick Test (Health Report)

This option enables you to quickly access all the electronic control units of the vehicle and generate a detailed report about vehicle health.

Tap [Health Report]:

The system will start scanning the ECUs. The following screen will appear:

Once the scanning process is complete, the following screen will appear:




*Explanation of terms:

- Clear DTCs - Clear the existing diagnostic trouble codes.
- Help - View the DTC help information.
- Report - Save the current data in text format.

7.2 System Scan

This option enables you to quickly scan which systems are installed on the vehicle.

Tap **[System Scan]**, the system starts scanning the systems.

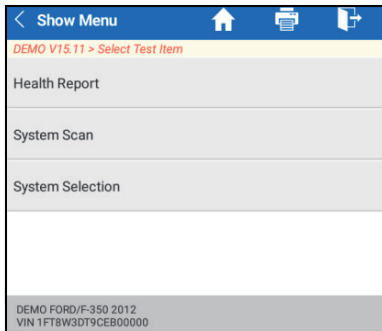

Once the scanning is complete, the following screen will appear:

System Name	Result
ECM(Engine Control Module)	Equipped
TCM(Transmission Control Module)	Equipped
ABS(Anti-lock Braking System)	Equipped
SRS(Supplemental Inflatable Restraint System)	Equipped
BCM(Body Control Module)	Equipped
IMM(Immobilizer)	Equipped
BMS(Battery Manager System)	Equipped
TPMS(Tire Pressure Monitoring System)	Equipped
SAS(Steering Angle System)	Equipped

DEMO FORD/F-350 2012
VIN 1FT8W3D79CEB00000


7.3 System Selection

This option enables you to manually select the test system and function step by step.


Tap **[System Selection]**:



The following screen will appear:

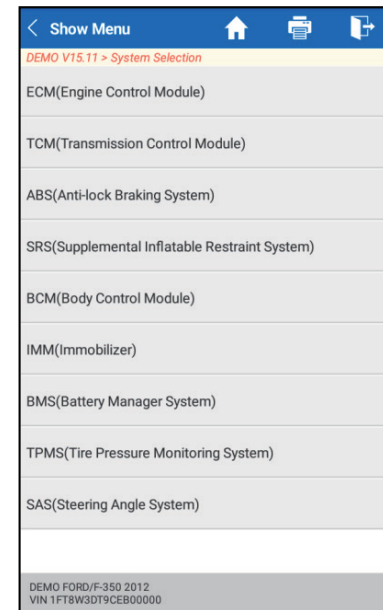


Tap the target system (take **[ECM]** for example) to the test function page:

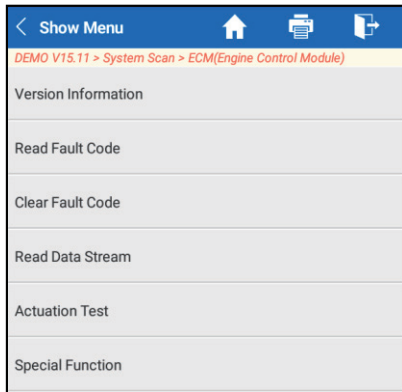

7.3.1 Tap **[Version Information]** to read the version information of system mode, vehicle VIN, software and ECU.

7.3.2 Tap **[Read Fault Code]** to display the detailed information of DTC records retrieved from the vehicle's control system:

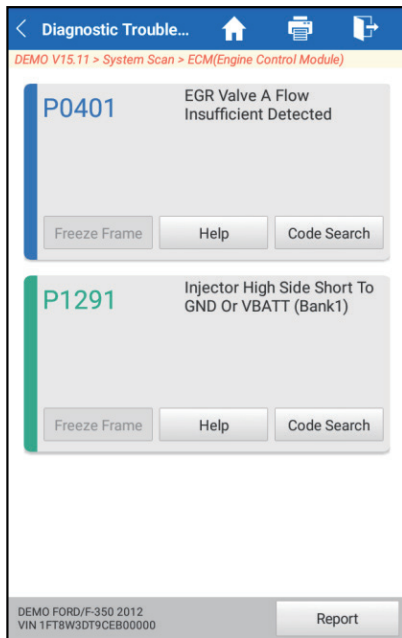


*Explanation of terms:

- Freeze Frame - A snapshot of critical parameter values at the time the DTC is set.
- Help - View the help information.
- Code Search - Search for more information about the current DTC online.
- Report - To save the current data in text format




7.3.3 Tap **[Clear Fault Code]** to erase the codes from the vehicle after reading the retrieved codes from the vehicle and certain repairs have been carried out.

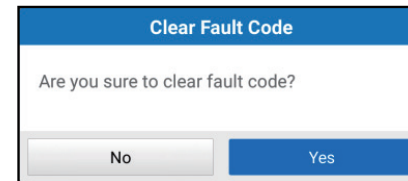

*Note: Make sure the vehicle's ignition key is in the ON position with the engine off before operating.

7.3.4 Tap **[Read Data Stream]** to view and capture (record) real-time Live Data.

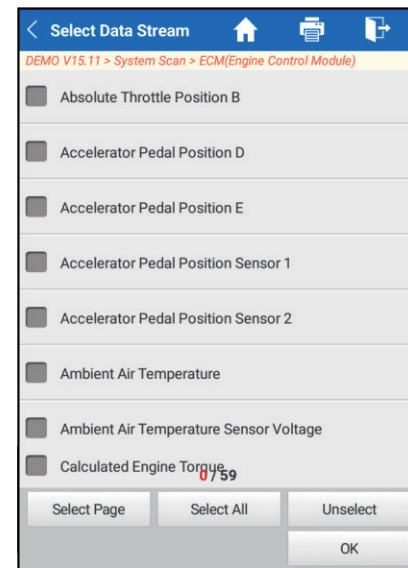


Selecting the desired items, tap [OK] to enter the data stream reading page, which is the Value default mode displaying the parameters in texts and shows in the list format.

Name	Value	Standard Range	Unit	English Metric
Absolute Throttle Position B	14.9	0 - 100	%	
Accelerator Pedal Position D	24.31	0 - 100	%	
Accelerator Pedal Position E	22.35	0 - 100	%	
Accelerator Pedal Position Sensor 1	1.28	0 - 5	V	
Accelerator Pedal Position Sensor 2	0.65	0 - 5	V	
Ambient Air Temperature	21	-40 - 215	de- gree C	
Ambient Air Temperature Sensor Voltage	1.74	0 - 5	V	
Barometric Pressure	99.5	0 - 117.2	KPa	

Graph Report Record Help


Tap to view the waveform graph of the current data stream item:

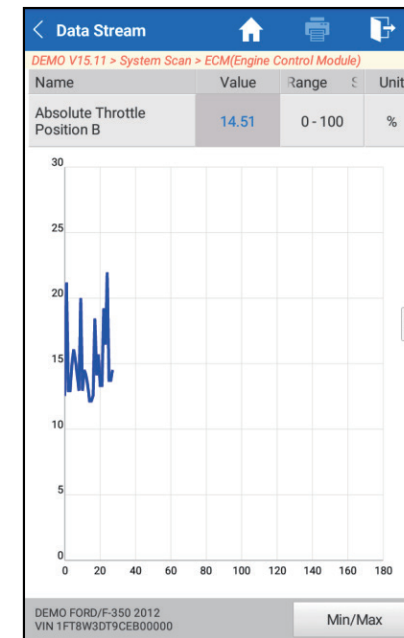

*Explanation of terms:

- Min/Max - to define the maximum/minimum value. Once the value goes beyond the specified value, the system will alarm.

Tap **[Graph]** to view the parameters being displayed in waveform graphs.

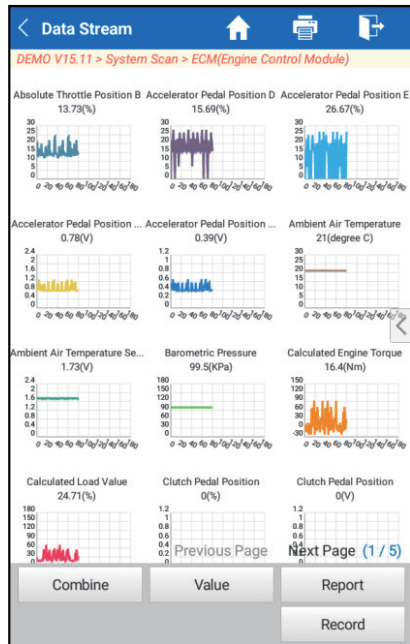


*Explanation of terms:

- Combine - This option is mostly used in graph merge status for data comparison.
- Value - Tap to display the parameters in texts.
- Report - To save the current data in text format. All reports are saved under the tab "Diagnostic Report" in "My Report" in the main menu.
- Record - To start recording diagnostic data for future playback and analysis. All reports are saved under the "Recorded Data" tab in "My Report" in the main menu.


7.4 Actuation Test

This option is used to access the vehicle-specific subsystem and component tests. Available tests vary by the vehicle manufacturer, year, and model. During the actuation test, the Phoenix / Phoenix Lite tablet outputs commands to the ECU in order to drive the actuators, and then determines the integrity of the system or parts by reading the ECU data, or by monitoring the operation of the actuators, such as switching an injector between two operating states.

Tap [Actuation Test]:

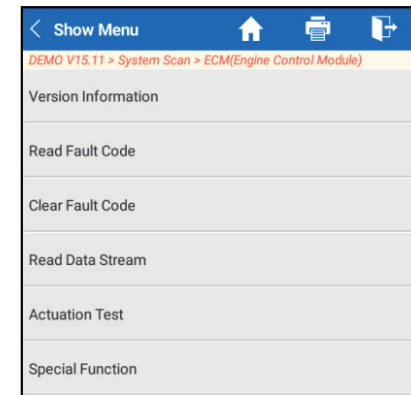


The following screen will appear:

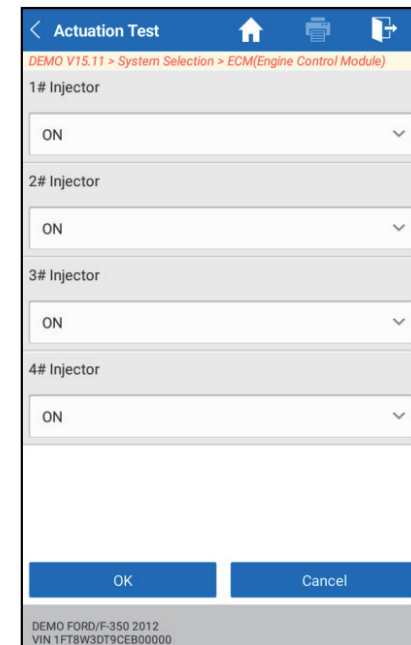

Simply follow the on-screen instructions and make appropriate selections to complete the test. Each time when an operation is successfully executed, "Completed" will display.

7.5 My Reports


This option is used to view, delete, or share the saved reports. Tap **[My Reports]**, the following screen will appear:

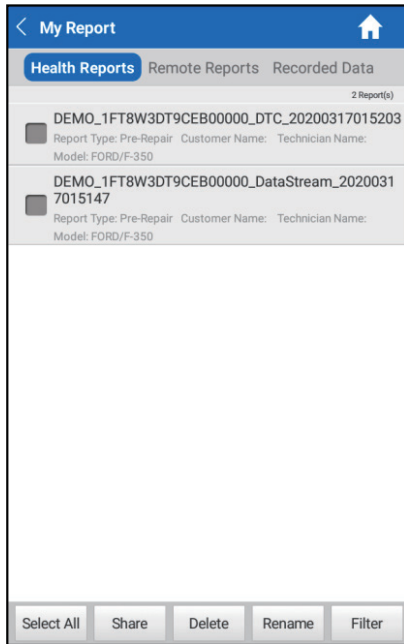

The **[Health Reports]** saves all the DTC results from the Read Trouble Code page.
The **[Remote Reports]** saves all the diagnostic reports generated in the process of remote diagnostics.
The **[Recorded Data]** saves all the running parameters while reading Data Stream.


7.6 Diagnostic History

This option enables users to directly get access to the previously tested vehicle's diagnostic records in details, so users can resume from the last operation, without the necessity of starting from scratch. Tap **[Diagnostic History]** on the main menu, all diagnostic records will be listed on the screen in date sequence.

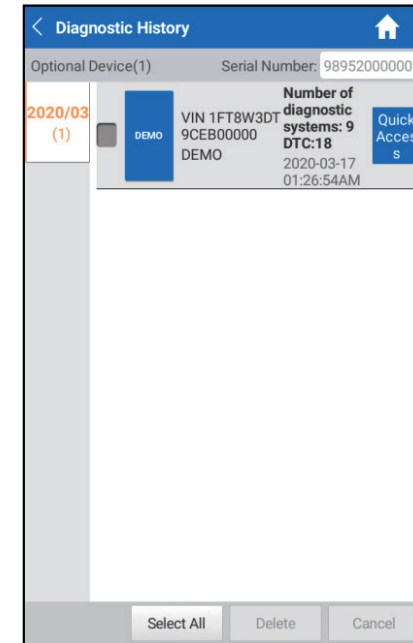


7.7 Feedback

This function enables you to feedback on the diagnostic issues to us for analysis and troubleshooting. Tap **[Feedback]**, and tap **[OK]** to enter into the vehicle diagnostic record page.

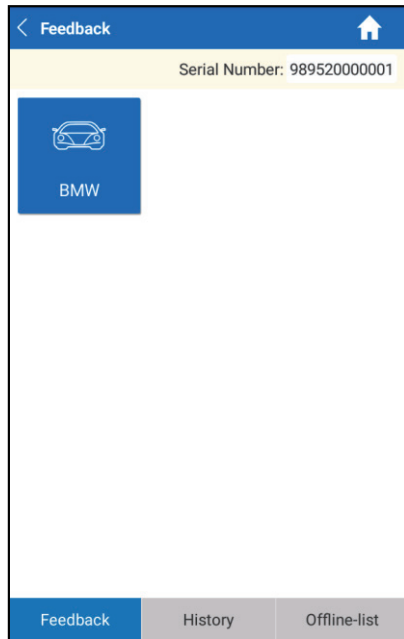

Tap **[History]**, to view the diagnostic logs which are marked with different color indicating the process status of the diagnostic feedback. Tap **[Offline-list]**, to enter the diagnostic feedback offline list page. Tap the target vehicle to enter the feedback page.

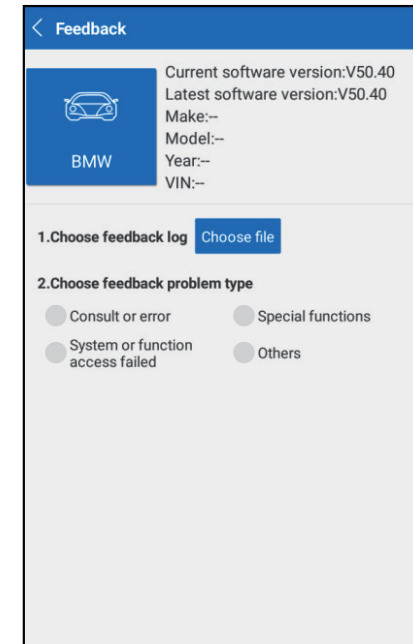


8. Reset Procedures

TOPDON Phoenix / Phoenix Lite provides an easy dial to quickly access the most commonly performed service functions as follows:

- Oil Reset Service
- Electronic Parking Brake Reset
- Steering Angle Calibration
- ABS Bleeding
- TPMS (Tire Pressure Monitor System) Reset
- Gear Learning
- IMMO Service
- Injector Coding
- Battery Maintenance System
- Diesel Particulate Filter (DPF) Regeneration
- Electronic Throttle Position Reset

Tap **[Reset Procedures]** in the main menu, the following screen will appear:



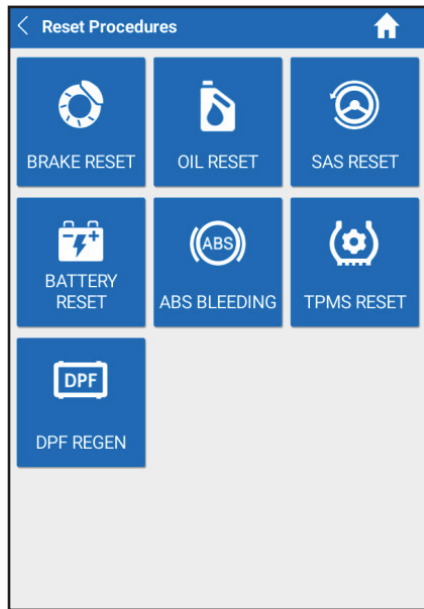

8.1 Oil Reset Service

This function enables you to reset the oil service lamp for the engine oil life system, which calculates an optimal oil life change interval depending on the vehicle driving conditions and weather events.

It needs to be performed in the following cases:

- If the service lamp is on, run car diagnostics first for troubleshooting. After that, reset the driving mileage or driving time, so as to turn off the service lamp, and enable a new driving cycle.
- If the service lamp is not on, but you have changed the engine oil or electric appliances that monitor oil life, you need to reset the service lamp.

8.2 Electronic Parking Brake Reset

This function enables you to reset the brake pad after replacing the brake pad.

It needs to be performed in the following cases:

- The brake pad and brake pad wear sensor are replaced.
- The brake pad indicator lamp is on.
- The brake pad sensor circuit is short, which is recovered.

- The servo motor is replaced.

8.3 Steering Angle Calibration

This function enables you to reset the steering angle, after replacing the steering angle position sensor, replacing steering mechanical parts (such as steering gearbox, steering column, end tie rod, steering knuckle), performing four-wheel alignment, or recovering car body.

8.4 ABS Bleeding

This function enables you to perform various bi-directional tests to check the operating conditions of Anti-lock Braking System (ABS).

It needs to be performed in the following cases:

- When the ABS contains air.
- When the ABS computer, ABS pump, brake master cylinder, brake cylinder, brake line, or brake fluid is replaced.

8.5 Tire Pressure Monitor System Reset

This function enables you to quickly lookup the tire sensor IDs from the vehicle's ECU, reset tire pressure and turn off the tire pressure MIL.

It needs to be performed in the following cases:

- Tire pressure is too low, the tire leaks, the tire pressure monitoring device is replaced or installed, the tire is replaced, the tire pressure sensor is damaged, and the tire is replaced for the car with tire pressure monitoring function.

8.6 Gear Learning

This function enables you to perform tooth learning for the car, to turn off the MIL

It needs to be performed in the following cases:

- After the engine ECU, crankshaft position sensor, or crankshaft flywheel is replaced.
- The DTC "tooth not learned" is present.

8.7 IMMO Service

This function enables you to perform the anti-theft key matching function, so that the immobilizer control system on the car identifies and authorizes remote control keys to normally use the car.

It needs to be performed in the following cases:

- When the ignition switch key, ignition switch, combined instrument panel, ECU, BCM, or remote control battery is replaced.

8.8 Injector Coding

This function enables you to write injector actual code or rewrite code in the ECU to the injector code of the corresponding cylinder, so as to more accurately control or correct cylinder injection quantity.

It needs to be performed in the following cases:

- After the ECU or injector is replaced.

8.9 Battery Maintenance System Reset

This function enables you to perform a resetting operation on the monitoring unit of vehicle battery, in which the original low battery fault information will be cleared and the battery matching will be done.

It needs to be performed in the following cases:

- The main battery is replaced.
- The battery monitoring sensor is replaced.

8.10 Diesel Particulate Filter (DPF) Regeneration

This function enables you to clear PM (Particulate Matter) from the DPF filter through continuous combustion oxidation mode (such as high-temperature heating combustion, fuel additive or catalyst reduce PM ignition combustion) to stabilize the filter performance.

It needs to be performed in the following cases:

- The exhaust back pressure sensor is replaced.
- The PM trap is removed or replaced.
- The fuel additive nozzle is removed or replaced.
- The catalytic oxidizer is removed or replaced.
- The DPF regeneration MIL is on and the maintenance is performed.
- The DPF regeneration control module is replaced.

8.11 Electronic Throttle Position Reset

This function enables you to make initial settings to throttle actuators and returns the "learned" values stored on ECU to the default state. Doing so can accurately control the actions of regulating throttle (or idle engine) to adjust the amount of air intake.

9. Software Upgrade

This function keeps your TOPDON Phoenix / Phoenix Lite being synchronized with the latest diagnostic software version.

9.1 Update Diagnostic Software & APP

Tap [Software Upgrade] in the main menu to enter the update center.


Vehicle	Current Version	Update Version	Size
<input checked="" type="checkbox"/> Firmware upgrade Program		V11.80	127.5 KB
<input checked="" type="checkbox"/> AutoSearch		V10.71	22.8 MB
<input checked="" type="checkbox"/> APP application program	V1.00.016	V1.00.019	129.2 MB
<input checked="" type="checkbox"/> DiagBaseService App		V1.00.008	1.9 MB
<input checked="" type="checkbox"/> DPU Link Manager Services		V1.00.024	968.0 KB
<input checked="" type="checkbox"/> ENDOSCOPE_APP		V1.8	3.0 MB
<input checked="" type="checkbox"/> License Plate Recognition Application		V1.00.002	4.5 MB
<input checked="" type="checkbox"/> Screencast_Application	V1.00.007	V1.00.011	21.7 MB
<input checked="" type="checkbox"/> VIN_RECOGNITION_APP		V1.01.007	9.2 MB
<input checked="" type="checkbox"/> AstonMartin		V10.44	1.7 MB

Once the download is finished, the software packages will be installed automatically.


9.2 Set Frequently Used Software

This function enables you to easily locate and quickly update some frequently used software.

Tap **[Common Software]** to create a frequently used software list:

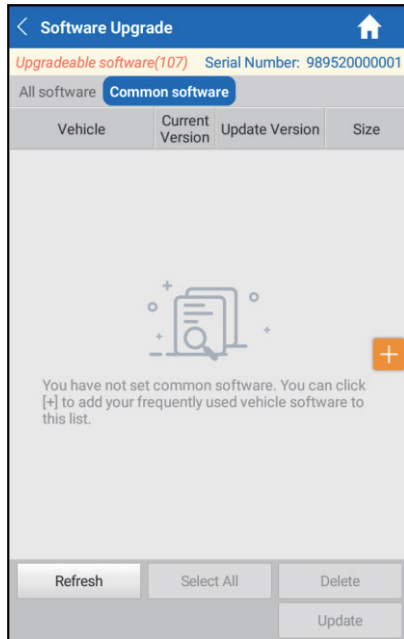

Tap **[Common software]** and tap **[+]**, the following screen will appear:

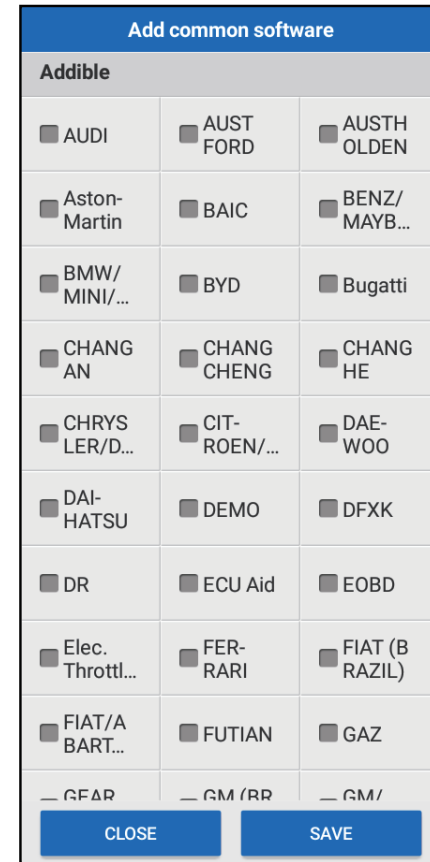


Select the software name and tap **[SAVE]**, the software will be displayed in the Common Software list.



10. Remote Assist (TeamViewer Quick Support)

This function enables you to receive remote support from technician fellows, colleagues or friends by allowing them to control your tablet on their computer TeamViewer software.

Tap **[Remote Assist]** on the main menu, the following screen will appear:

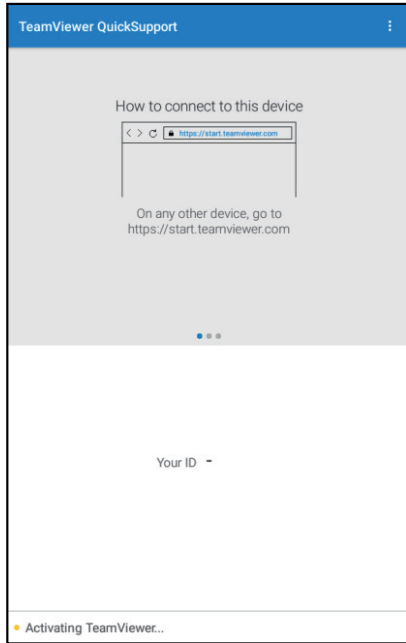

***Note:** In order to provide support and take control of your tablet remotely, your partner needs to install and run the TeamViewer full version program in his computer, and have your TeamViewer

ID. Visit <http://www.teamviewer.com> for details.

11. More

11.1 Maintenance Help


This option includes the following modules: Product Manual, FAQ (Frequently Asked Questions), and Quick Start Guide.

11.2 VCI

This option allows you to manage all your activated VCIs.

If several VCIs are activated to use this tool, a list of VCIs will be displayed on the screen. Once you choose the VCI that belongs to another account, you need to log out, and then input the right account to continue.

11.3 Activate VCI

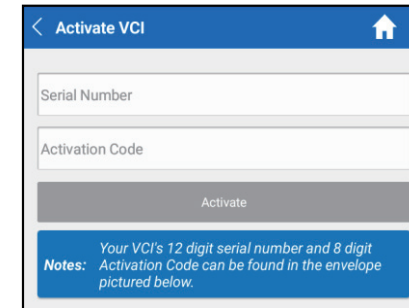

Input the Serial Number and Activation Code, and then tap "Activate" to activate it.

For details on how to obtain Activation Code, tap the link below to get help.

11.4 Firmware Fix


This option allows you to upgrade and fix diagnostic firmware.

***Note:** Do not cut power or switch to other interfaces while operating.



11.5 Profile

This option allows you to view and configure personal information.

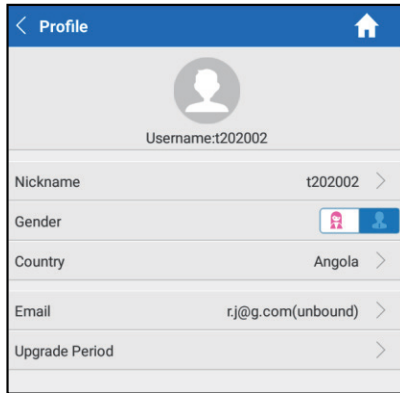

11.6 Change password

This option allows you to modify your login password.

11.7 Settings


This option allows you to make some application settings and view software version information etc.

11.7.1 Units

It is designed to configure the measurement unit. Metric System and English System are available.


11.7.2 Shop Information

This option lets you define your print information. It mainly includes Workshop, Address, Telephone, Fax and License Plate.

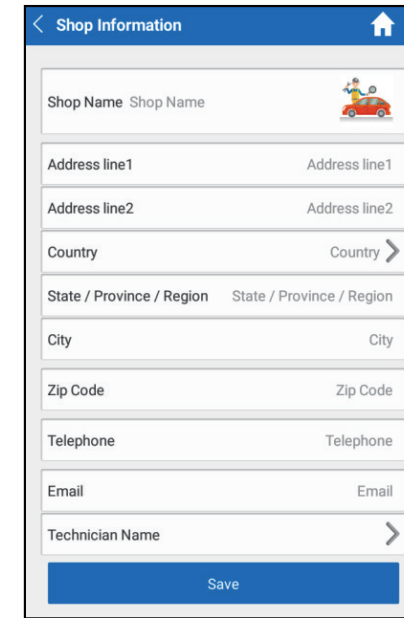


11.7.3 Printer Set

This option allows you to establish a wireless connection between Phoenix / Phoenix Lite and the Wi-Fi printer (sold separately) while performing printing operations. Tap **[Printer Set]**

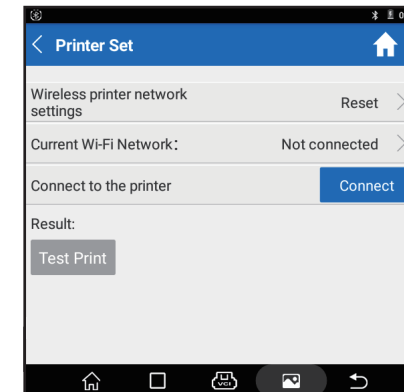

A: If the Wi-Fi printer has not been configured:
Tap **[Reset]**. The following screen will appear:

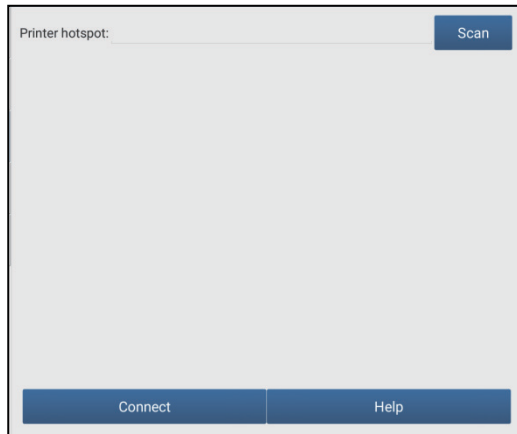

Tap **[Scan]** to start scanning and select the desired printer hotspot named with X-431PRINTER-XXXX (XXXX stands for 4 characters).

Then tap **[Connect]**, and **[Scan]** again to select the desired local Wi-Fi network from the list. After that, type in the security password (If it is an open network, password is not required), and then tap **[Confirm]**.

Once the Wi-Fi network of the printer is connected and the printer is found, tap **[Printing test]** to test the printing. Now you can use the Wi-Fi printer to print!

B: If the Wi-Fi printer has been configured:

Tap **[Connect to Printer]**:

- Tap **[Test Print]** directly to test the printing, if the local network remains.
- If the local network changes, you need to reset the Wi-Fi printer.

11.7.4 Clear Cache

This option allows you to clear the App cache.

11.7.5 About

The software version information and disclaimer are included.

Technical Specification

Phoenix / Phoenix Lite Tablet

Operating System	Android 7.0
CPU	1.3GHz Quad-core
Display	7" Touch Screen (1024*600 Resolution)
Memory	2GB
Hard disk	32GB
Connectivity	<ul style="list-style-type: none"> • Wi-Fi (802.11 b/g/n) • Bluetooth 4.0
Camera	5.0MP Rear-Facing Camera with AF
Audio Input/Output	<ul style="list-style-type: none"> • Microphone • Speakers
Input Voltage	5V/2A
Power Consumption	Max. 10W
Working Temperature	0°C ~50°C (32~122 °F)
Storage Temperature	-20°C ~70°C (-4~158 °F)
Dimensions	205*130*50.8 mm (8.07*5.11*2 inches)
Weight	635g (22.39 oz)

VCI Connector

Working Voltage	DC 9V ~ 18V
Working Current	@12V, about 130mA
Standby Current	@12V, about 60mA
Working Temp	0°C ~50°C (32~122 °F)
Storage Temp	-20°C ~70°C (-4~158 °F)
Relative Humidity	20%~90%
Dimensions	72*47* 24 mm (2.83*1.85*0.94 inches)
Weight	50g (1.76 oz)

Warranty

- TOPDON One Year Limited Warranty

The TOPDON Company warrants to its original purchaser that TOPDON products will be free from defects in material and workmanship for 12 months from the date of purchase (Warranty Period). For the defects reported during the Warranty Period, TOPDON will, according to the technical support analysis and confirmation, either repair or replace the defective part or product.

- This limited warranty is void under the following conditions:

Misused, disassembled, altered, or repaired by a non-TOPDON technical repair specialist.
Careless handling and violation of operation.

Warnings

- ✔ DO NOT collide, throw, or puncture Phoenix / Phoenix Lite, and avoid falling, extruding, and bending it.
- ✔ DO NOT insert foreign objects into or place heavy objects on your device. Sensitive components inside might cause damage.
- ✔ DO NOT use Phoenix / Phoenix Lite in exceptionally cold or hot, dusty, damp, or dry environments.
- ✔ DO NOT place Phoenix / Phoenix Lite into apparatus with a strong electromagnetic field.
- ✔ DO NOT place the Phoenix / Phoenix Lite near any magnetic devices, because its radiations can damage the screen and erase the data stored on Phoenix / Phoenix Lite.
- ✔ DO NOT attempt to replace the internal rechargeable lithium battery. Contact the dealer for factory replacement.
- ✔ DO NOT disconnect power abruptly when Phoenix / Phoenix Lite is being formatted or in process of uploading or downloading. Or else it may result in a program error.
- ✔ DO NOT delete unknown files or change the name of files or directories that were not created by you, otherwise your Phoenix / Phoenix Lite software might fail to work.
- ✔ Please contact the dealer if Phoenix / Phoenix Lite needs to get repaired. Phoenix / Phoenix Lite is a sealed unit. There are no end-user serviceable parts inside. All internal repairs must be done by an authorized repair facility or qualified technician.
- ✔ Please use the included battery and charger. Risk of explosion if the battery is replaced with an incorrect type.
- ✔ Please turn the Phoenix / Phoenix Lite off, if it causes interference or generate a potential risk in some places.
- ✔ Be aware that accessing network resources can leave your Phoenix / Phoenix Lite vulnerable to computer viruses, hackers, spyware, and other malicious activities that might damage your device, software or data. It is your responsibility to ensure that you have adequate protection in the forms of firewalls, antivirus software, and anti-spyware software and keep such software up to date.

FCC Statement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the

following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Phoenix (FCC ID: 2AVYWPHOENIX) has been evaluated to meet general RF exposure requirement. The antenna(s) used for this transmitter must not transmit simultaneously with any other antenna or transmitter, except in accordance with FCC multi-transmitter product procedures. The highest reported SAR value is 0.24W/kg. This device has a 20MHz and 40MHz bandwidth modes.

Hereby, Topdon Technology Co., Ltd declares that Phoenix is in compliance with the essential requirements and other relevant provisions of Radio Equipment Directive 2014/53/EU.

Operation frequency: Bluetooth 2402-2480MHz, WiFi 802.11b/g/n HT20:2412-2472MHz, 802.11n HT40:2422-2462MHz

Max. RF output power: WiFi (2.4G) 19.76dBm EIRP; Bluetooth 9.65dBm EIRP.

The RF frequencies can be used in Europe without restriction.

Cautions

When Using Phoenix / Phoenix Lite

Before using this test equipment, please read the following safety information carefully.

- ✔ DO NOT connect or disconnect any test equipment while the ignition is on or the engine is running.
- ✔ DO NOT drive the vehicle and operate the test equipment at the same time. Any distraction may cause an accident.
- ✔ Always perform automotive testing in a safe environment.
- ✔ Wear an ANSI-approved eye shield when testing or repairing vehicles.
- ✔ The vehicle shall be tested in a well-ventilated work area, as engines produce various poisonous compounds (hydrocarbon, carbon monoxide, nitrogen oxides, etc.)
- ✔ Put blocks in front of the drive wheels and never leave the vehicle unattended while testing.
- ✔ Keep the test equipment dry, clean, free from oil, water, or grease. Use a mild detergent on a clean cloth to clear the outside of the equipment as necessary.
- ✔ Keep clothing, hair, hands, tools, test equipment, etc. away from all moving or hot engine parts.
- ✔ Before starting the engine, put the gear lever in the Neutral position (for manual transmission) or in the Park (for automatic transmission) position to avoid injury.
- ✔ To avoid damaging the test equipment or generating false data, please make sure the vehicle battery is fully charged and the connection to the vehicle DLC (Data Link Connector) is clear and secure.
- ✔ Automotive batteries contain sulfuric acid that is harmful to skin. In operation, direct contact with the automotive batteries should be avoided. Keep the ignition sources away from the battery at all times.

When Operating Vehicle's ECU

- ✔ DO NOT disconnect battery or any wiring cables in the vehicle when the ignition switch is on, as this could avoid damage to the sensors or the ECU.
- ✔ DO NOT place any magnetic objects near the ECU. Disconnect the power supply to the ECU before performing any welding operations on the vehicle.
- ✔ Use extreme caution when performing any operations near the ECU or sensors. Ground yourself when you disassemble PROM, otherwise ECU and sensors can be damaged by static electricity.
- ✔ When reconnecting the ECU harness connector, be sure it is attached firmly, otherwise electronic elements, such as ICs inside the ECU, can be damaged.

FAQ

Q: How to save power?

- A: 1. Please turn off the screen while Phoenix / Phoenix Lite keeps idle.
2. Set a shorter standby time.
3. Decrease the brightness of the screen.
4. If WLAN connection is not required, please turn it off.
5. Disable GPS function if GPS service is not in use.

Q: How to fix the communication error with vehicle ECU?

A: Please confirm:

1. Whether diagnostic connector is correctly connected.
2. Whether the ignition switch is ON.
3. If all above is normal, send the vehicle's year, make, model and VIN number to us via the Feedback function.

Q: Failed to enter into vehicle ECU system?

A: Please confirm:

1. Whether the vehicle is equipped with the system being diagnosed.
2. Whether the VCI is correctly connected.
3. Whether the ignition switch is ON.
4. If all above is normal, send the vehicle's year, make, model and VIN number to us via the Feedback function.

Q: How to reset TOPDON Phoenix / Phoenix Lite?

A: Do the following reset procedures:

1. Tap "Settings" -> "Back & Reset".
2. Tap "Factory Data Reset".
3. Tap "Reset Tablet".
4. Tap "Clear All Data" to start resetting until the tool automatically reboots.

*Note: Resetting may cause data loss. Please back up the important data and information before operation.

Q: How to register TOPDON Phoenix / Phoenix Lite or a new VCI?

A: 1. If this is your first time using the device, refer to the user manual for information.

2. If you want to active a new VCI, do the following steps:

- a) Tap "more" -> "Activate VCI".
- b) Input the product S/N and activation code, which can be found from the included password envelope.
- c) Tap "Activate".
- d) Tap "more" -> "VCI" to check if the activated VCI is displayed in the list or not. Multiple VCIs can be bound to one tool. You can switch to the one you intend to use while diagnosing.

*Note: Please make sure the network is properly connected before operation.

Q: How to change the language of the vehicle diagnostic software?

A: please go to the update center to download the vehicle diagnostic software in the preferred language, after the system language is correspondingly set.

*Note: English is the default language. If the menu is still in English after the operation, it indicates the software of the corresponding language is under development.

Q: How to pair the VCI with the TOPDON Phoenix / Phoenix Lite tablet?

A: 1. Turn the ignition on.

2. Plug the VCI directly (or use the OBD-II extension cable) into the vehicle's DLC.

3. Tap "Setting" -> "Bluetooth".

4. Switch the Bluetooth "ON". Phoenix / Phoenix Lite will automatically search for all the available Bluetooth devices.

5. Tap the SN of the VCI (12 digits, e.g. 98*****00,) to start pairing.

6. Input the Bluetooth request code (default value: 0000 or 1234) if necessary.